Tri-Beam® Arc Hammock Stand

Congratulations on your purchase of the Tri-Beam® Arc Hammock Stand. We believe that you will find it a product of unsurpassed quality and durability.

Parts included to assemble your Tri-Beam Arc Hammock Stand:

- 2 Foot poles
- 2 End sections
- 1 Center section

Hardware Included:

2 - "Z" Hooks 4 - Bolts 4 - Flat Washers 4 - Nuts

Tool needed: Adjustable Wrench

NOTE: Two people may be needed for assembly.



1. Lay all hammock stand pieces on a flat surface.

2. Install spring pins by inserting one in each small end of center section so that the pin points out of the center pole as shown. Attach one foot bracket to an end pole by matching welded bracket on the end section to the welded bracket on the foot pole. Place bolts through holes on either side of the end section through welded brackets. Add washer and nut to each bolt. Make sure washer is on nut side of the bolt. Tighten securely with adjustable wrench.

3. Attach remaining foot bracket to remaining end pole. Match welded bracket on the end pole to the welded bracket on the foot pole. Place bolts through holes on either side of the end section through welded brackets. Add washer and nut to each bolt. Make sure washer is on nut side of the bolt. Tighten securely with adjustable wrench.

- 4. Attach end poles to center poles by aligning poles and depressing spring pin as you insert small end of center pole into end pole. Make sure the spring pin is fully engaged.
- 5. Attach "Z" hooks and hang hammock at comfortable height.

CAUTIONS:

Use caution when lying in your hammock. Position your body in the center of the hammock and lower yourself gently. The hammock ropes will stretch with use and should be checked routinely. Hammock chain should be adjusted as needed.

- DO NOT ALLOW CHILDREN TO USE THE HAMMOCK WITHOUT DIRECT ADULT SUPERVISION.
- DO NOT EXCEED LOAD LIMIT OF 450 LBS.
- DO NOT REPLACE THE 'Z' HOOKS WITH OTHER HARDWARE. The 'Z' hooks that come with your hammock are specially selected to be strong enough for use with your hammock stand. If you need replacement 'Z' hooks, please contact The HammockSource at 1-800-643-3522.

Please inspect your stand before use and periodically during the usage season for tightness of fasteners, weld integrity, or excessive rust.

WARRANTY INFORMATION:

Products of The HammockSource are guaranteed to be free of defects in workmanship and materials for up to one year after the purchase date. Prolonged exposure to weather conditions including snow, rain, and humidity are not covered under the warranty nor is damage caused by normal wear, mildew, or improper care including storage, maintenance, and installation. If an item is found to be defective within one year of its purchase, it will be replaced without charge upon the return of the unit accompanied by a sales receipt. If you choose to return an item, you must contact our customer service department at 252.758.0641 to obtain a Return Authorization Number that will allow us to track your unit once it arrives at our warehouse; thereby creating a faster response to your concern.



End Pole



5186

Spring

Pin

1/4" bolt

Center Pole