



Original Pawleys Island Rope

Congratulations on your purchase of the Original Pawleys Island Rope Swing. We believe that you will find it a product of unsurpassed quality and durability.

We designed the Original Pawleys Island Rope Swing to be both beautiful and functional using only the highest quality materials. It may be hung from a sturdy limb or beam (strong enough to support at least 450 lbs.) or from one of the swing stands that we offer. We hope you will enjoy years of pleasure and relaxation from this swing.

The box contains:

- 2 - Oak Braces (4 sided) with Rope Body and Rope Stabilizers (front - with screws; back - with pins) attached
- 1 - Oak Brace (4 sided)
- 2 - Curved Oak Arms
- 2 - Chain, ring and eyebolt assemblies

Hardware:

- 10 - Washers
- 6 - Nuts
- 2 - Carriage Bolts

You also will need:


- 9/16" wrench
- Adjustable Wrench
- Hammer




Assembly Instructions:

Note: If you plan to hang your Original Pawleys Island Rope Swing on a swing stand, make sure your stand is assembled according to its instructions before you begin assembling your swing.

1. Lay the Oak Braces with the Rope Body attached on the ground so that the Rope Stabilizer that has screws is facing you. The Rope Stabilizer with the pins should be at the top facing away from you.
2. Place the front Oak Brace (with the screwed on Rope Stabilizer) on the front of the Curved Swing Arm. (See Fig. 1) Slide the eyebolt of the longest eyebolt chain through a washer, the Oak Brace with the attached rope body and the Curved Swing Arm. Attach a washer and nut on the underside of the Curved Swing Arm and hand tighten. Repeat this process for the other Curved Swing Arm on the opposite side of the swing.
3. Place the Oak Brace (with the pinned Rope Stabilizer) behind the Curved Swing Arm, lining up the hole in the top of the Curved Swing Arm with the hole in the Oak Brace. (See Fig. 2) Slide the eyebolt of the remaining eyebolt chain (shortest) through a washer, the Curved Swing Arm and the Oak Brace. Attach a washer and nut on the backside of the Oak Brace and hand tighten. Repeat this process for the other Curved Swing Arm on the opposite side of the swing.

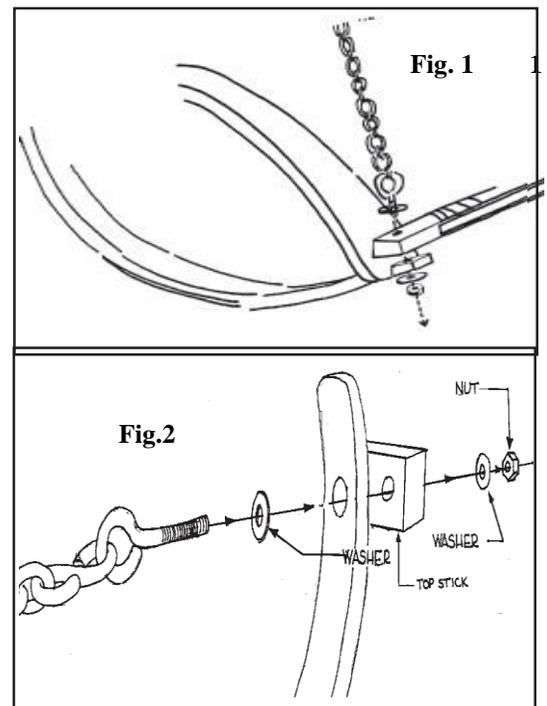

4. Insert remaining single Oak Brace through the Curved Swing Arm and on top of the Curved Swing Arm bottom brace. Make sure that the brace is under the rope seating. (See Fig. 3) Line up the hole in the Oak Brace and the Curved Swing Arm. Slide a carriage bolt through the Oak Brace and the Curved Swing Arm. Attach a washer and nut on the underside of the Curved Swing Arm and hand tighten. Repeat this process for the other Curved Swing Arm on the opposite side of the swing.
5. Use a 9/16" wrench and an adjustable wrench to securely tighten all bolts.

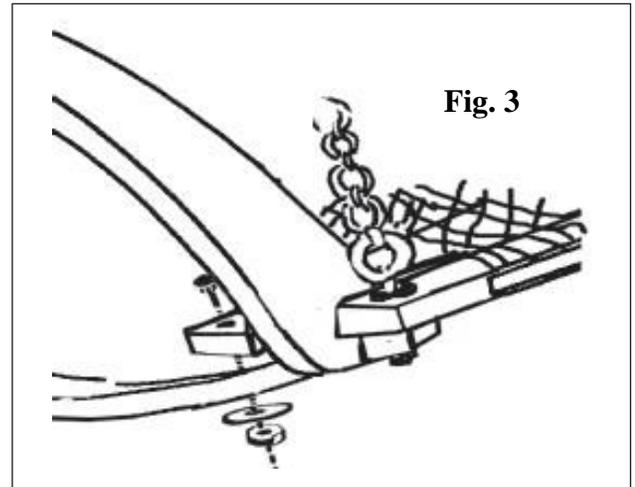

If you plan to hang your swing from a tree limb or beam:

- a. Select a location that is 6 1/2 - 8 1/2 feet off the ground and will support at least 450 lbs. When installing the tree hooks that accompany your swing, first drill a 1/8"-3/16" pilot hole. (Pilot hole should be as small as possible in order to ensure safe assembly and use of swing.) Insert the screw hook to the point that the eye of the screw is in contact with the surface of the hole.

NOTE: Do not over-twist the hook assembly. This may cause damage to the metal and weaken the support.

- b. If installing the swing into any surface other than wood, consult a professional for the proper method and the additional supplies needed for a safe installation.

CARE AND MAINTENANCE: The Original Pawleys Island Rope Swing is crafted using durable Duracord rope. Proper care and cleaning of your rocker will help preserve and maintain its natural beauty and insure years of use.

- A solution of mild soap and water will re-move most dirt and is not harmful to the rope fibers.
- For stains, spot clean and rinse thoroughly. Air dry.
- Keep rocker out of direct sunlight and rain whenever possible.
- Natural effects of weathering from sun and rain exposure: If not allowed to dry thoroughly, mold or mildew will result. The oak arms will become bleached and may turn gray. Varnish finish may wear off surface.
- Check bolts periodically for tightness.

DO NOT ALLOW CHILDREN TO USE THE SWING WITHOUT DIRECT ADULT SUPERVISION.

WARRANTY INFORMATION: Products of The HammockSource are guaranteed to be free of defects in workmanship and materials for up to one year after the purchase date. Prolonged exposure to weather conditions including snow, rain, and humidity are not covered under the warranty nor is damage caused by normal wear, mildew, improper care including storage, maintenance, and installation. If an item is found to be defective within one year of its purchase, it will be replaced without charge upon the return of the unit accompanied by a sales receipt. If you choose to return an item, you must contact our customer service department at 252-758-0641 to obtain a Return Authorization Number that will allow us to track your unit once it arrives at our warehouse; thereby creating a faster response to your concern.