

## Double Log Rack

**Congratulations on your purchase of the Double Log Rack. We believe that you will find it a product of unsurpassed quality.**

**The package should include:**

- 2 End supports
- 4 Base supports
- 12 End caps
- 1 Hardware packet

**Hardware Packet includes:**


- 12 Bolts
- 12 Nuts
- 12 Washers

**Assembly Instructions:**

1. Place caps on end supports.
2. Thread bolt through end and base support, then add washer and place nut onto bolt. Hand tighten.
3. Repeat step two for all ends and to connect the base supports.
4. When all bolts and nuts are in place, tighten securely.

**WARRANTY INFORMATION:**

Products of The HammockSource are guaranteed to be free of defects in workmanship and materials for up to one year after the purchase date. Prolonged exposure to weather conditions including snow, rain, and humidity are not covered under the warranty nor is damage caused by normal wear, mildew, improper care including storage, maintenance, and installation. If an item is found to be defective within one year of its purchase, it will be replaced without charge upon the return of the unit accompanied by a sales receipt. A Return Authorization is needed for return and may be obtained by contacting 800.334.1078.

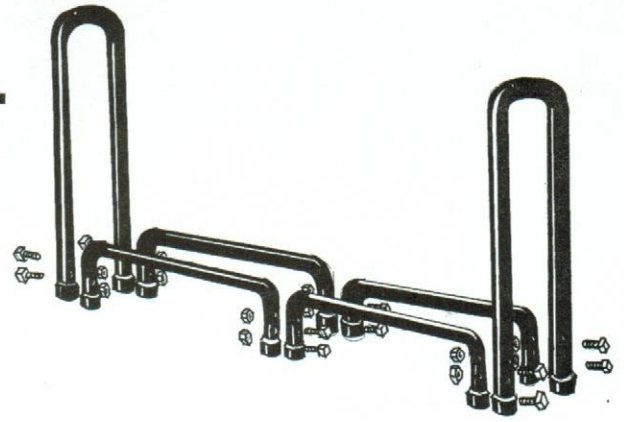

**CAUTION**

Do not load storage rack until unit is fully assembled on a flat, level surface. Load and unload evenly for proper weight distribution. If the load is unbalanced, the rack could tip over possibly causing injury.

If you have any questions about your new Double Log Rack, please contact us at:  
**The HammockSource - Post Office Box 1602,  
Greenville, North Carolina 27834  
Consumer Customer Service: 800-643-3522**

**5141  
OW/OW/0A**

## Double Log Rack

**Congratulations on your purchase of the Double Log Rack. We believe that you will find it a product of unsurpassed quality.**

**The package should include:**

- 2 End supports
- 4 Base supports
- 12 End caps
- 1 Hardware packet

**Hardware Packet includes:**


- 12 Bolts
- 12 Nuts
- 12 Washers

**Assembly Instructions:**

1. Place caps on end supports.
2. Thread bolt through end and base support, then add washer and place nut onto bolt. Hand tighten.
3. Repeat step two for all ends and to connect the base supports.
4. When all bolts and nuts are in place, tighten securely.

**WARRANTY INFORMATION:**

Products of The HammockSource are guaranteed to be free of defects in workmanship and materials for up to one year after the purchase date. Prolonged exposure to weather conditions including snow, rain, and humidity are not covered under the warranty nor is damage caused by normal wear, mildew, improper care including storage, maintenance, and installation. If an item is found to be defective within one year of its purchase, it will be replaced without charge upon the return of the unit accompanied by a sales receipt. A Return Authorization is needed for return and may be obtained by contacting 800.334.1078.

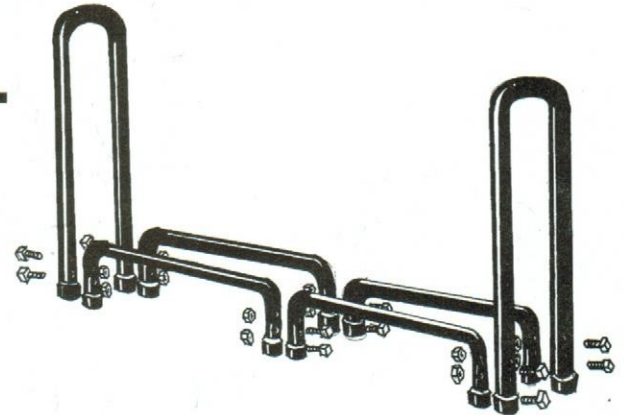

**CAUTION**

Do not load storage rack until unit is fully assembled on a flat, level surface. Load and unload evenly for proper weight distribution. If the load is unbalanced, the rack could tip over possibly causing injury.

If you have any questions about your new Double Log Rack, please contact us at:  
**The HammockSource - Post Office Box 1602,  
Greenville, North Carolina 27834  
Consumer Customer Service: 800-643-3522**

**5141  
OW/OW/0A**