



# REFINED SINGLE GLIDER INSTRUCTIONS

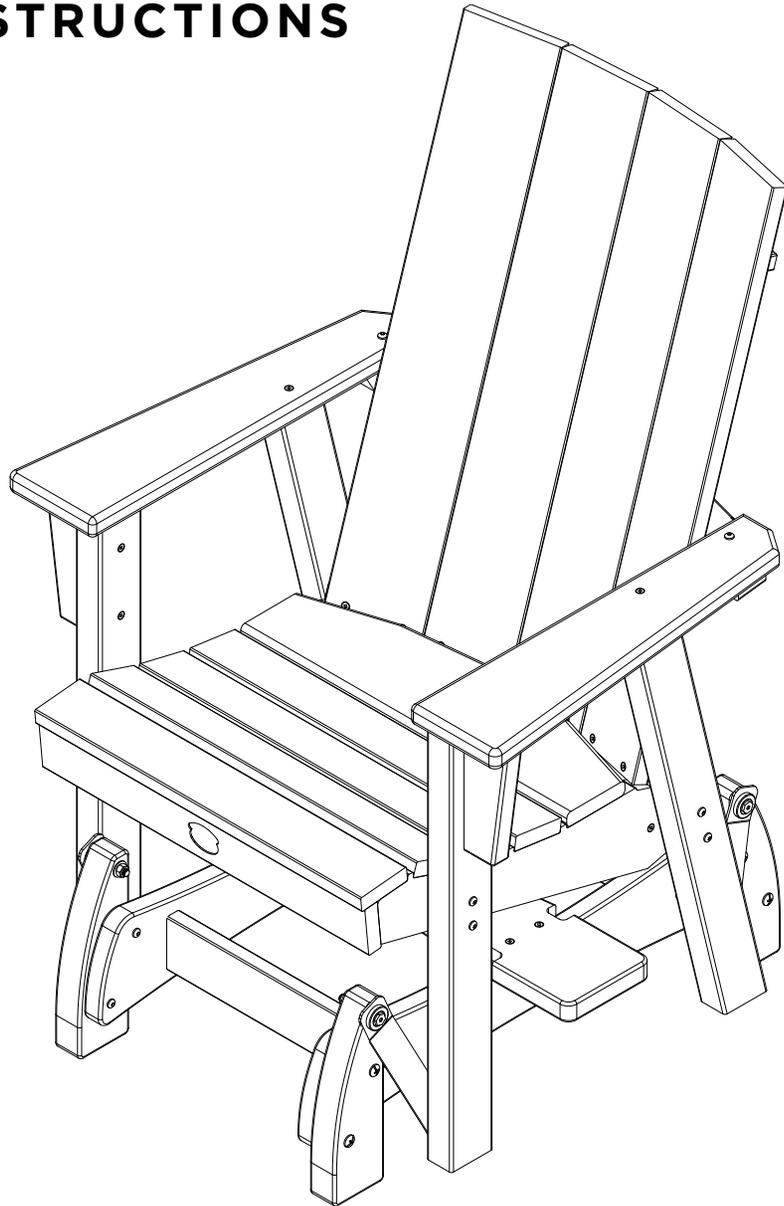

**Tip:** When using a barrel bolt with a barrel nut, place the bolt into the barrel nut and gently turn it counter clockwise until you feel a slight click. Then proceed to turn the bolt clockwise to tighten the barrel nut onto the barrel bolt.

## HARDWARE PACK

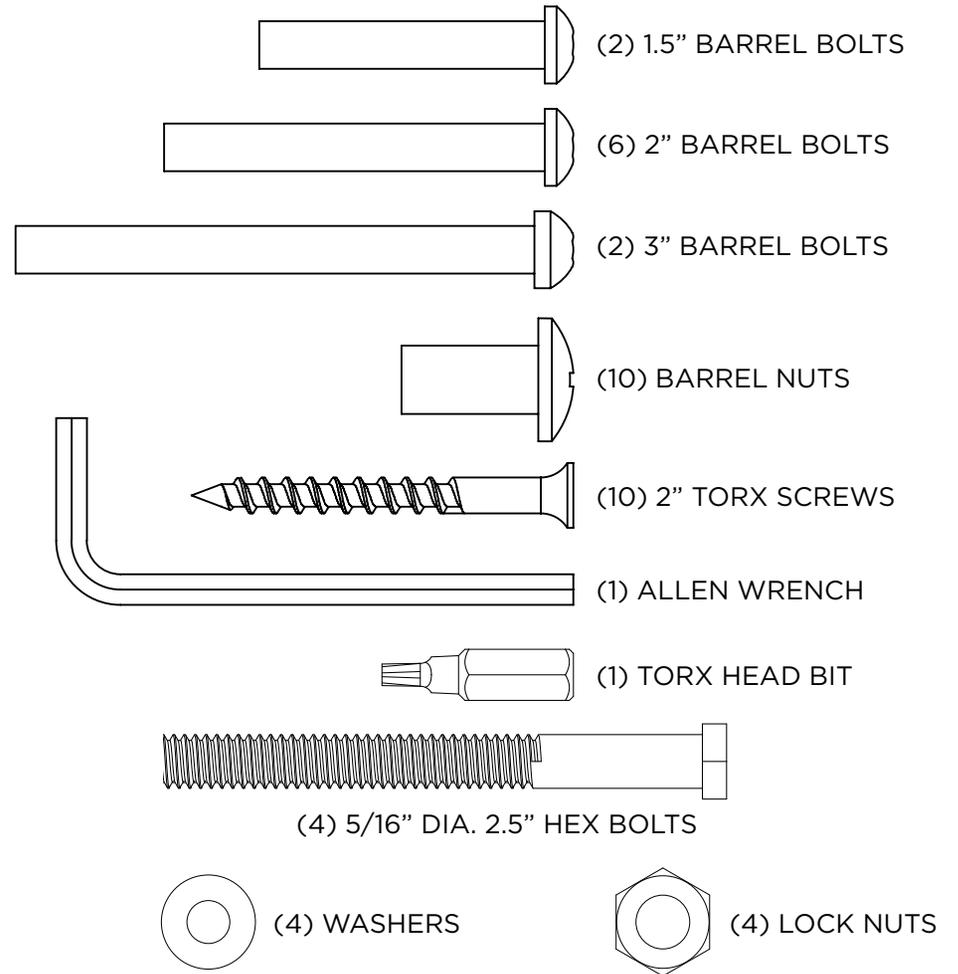

## CHAIR PARTS


- CHAIR BACK
- CHAIR SEAT
- LEFT ARM ASSEMBLY
- RIGHT ARM ASSEMBLY
- (2) GLIDER FRAMES
- (2) GLIDER SPREADERS
- GLIDER SPACER

## SUGGESTED TOOLS

- RUBBER MALLET
- KNIFE OR SCISSORS
- PHILLIPS HEAD SCREWDRIVER
- DRILL
- SOCKET WRENCH
- 1/2" x 1/4" DEEP SOCKET

**ASSEMBLY**

**STEP 1.** Use (8) 2" torx screws to fasten the spreaders and spacer to the glider frames as shown below.

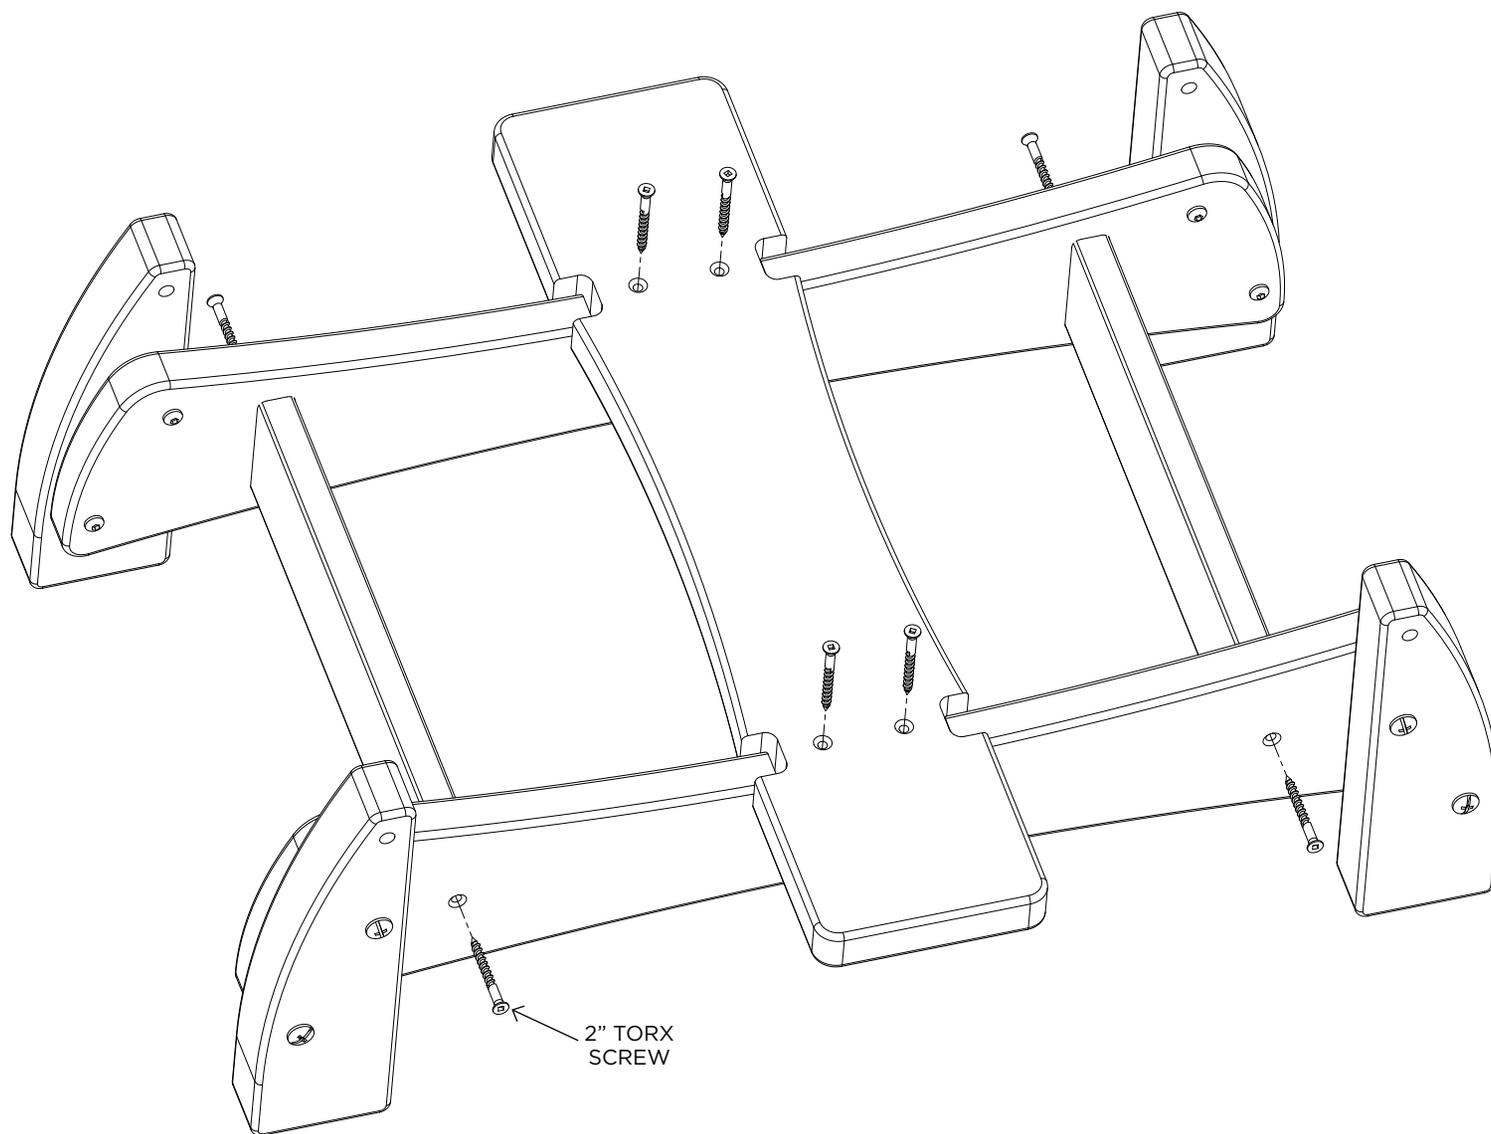


## ASSEMBLY


**STEP 2.** Use (6) 2" barrel bolts, (2) 3" barrel bolts and (8) barrel nuts to attach right & left arm/leg assembly to chair seat. The 3" bolts go through the top hole on the front leg.

**Note:** rear spreader hidden on image for visibility.


**Keep all barrel bolts loose until Step 4.**

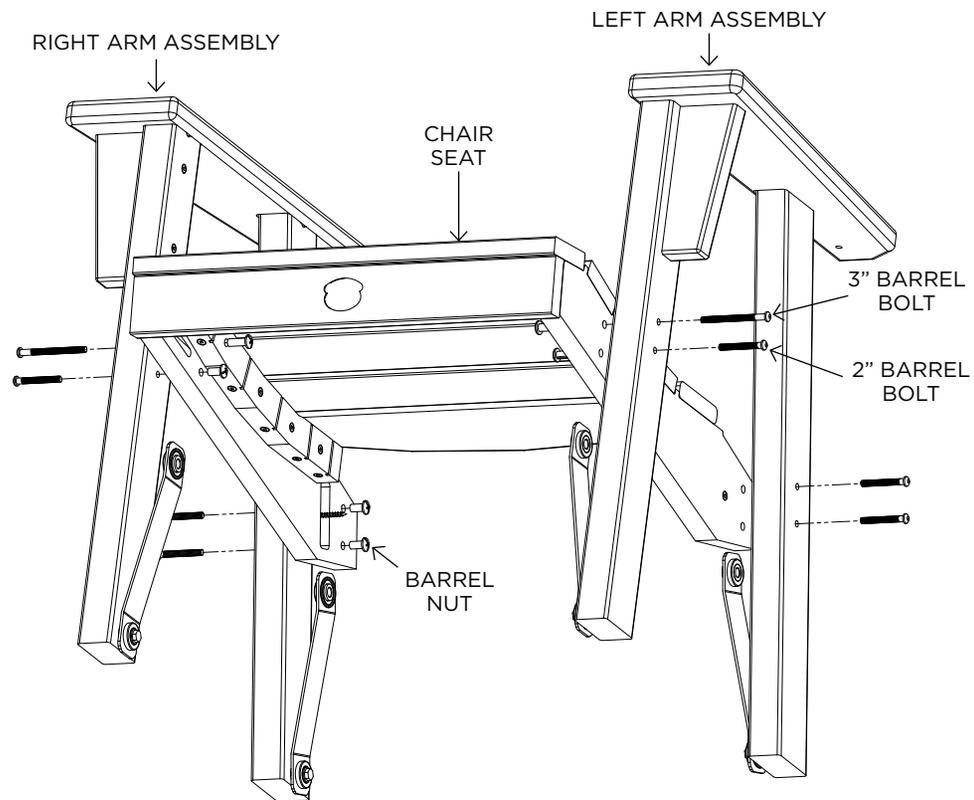


**STEP 3.** Use (2) 1.5" barrel bolts and (2) barrel nuts to attach chair back to right & left arm assemblies.

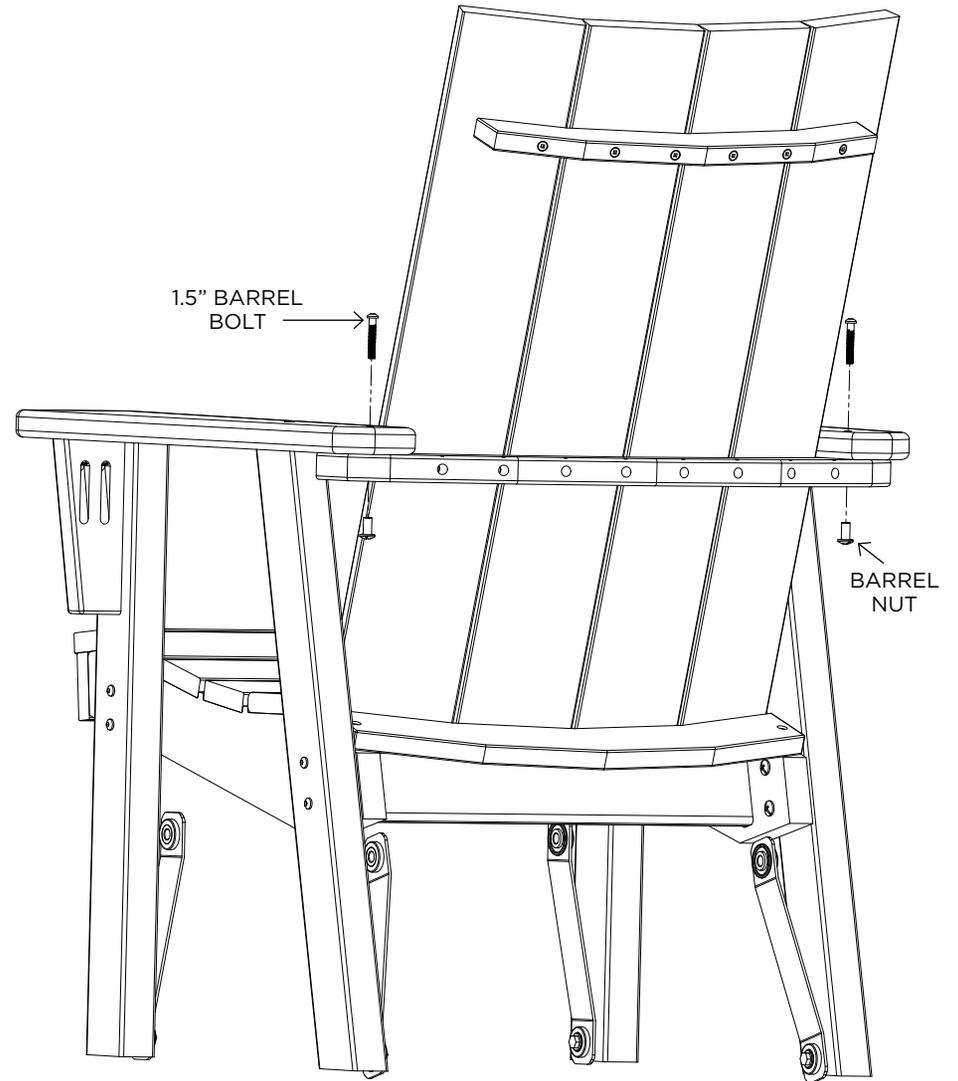

**STEP 4. PUSH FORWARD TO NOTCH IN FRAME.** Use (2) 2" torx screws to attach chair back to chair seat. **Tighten all bolts once screws are in.**

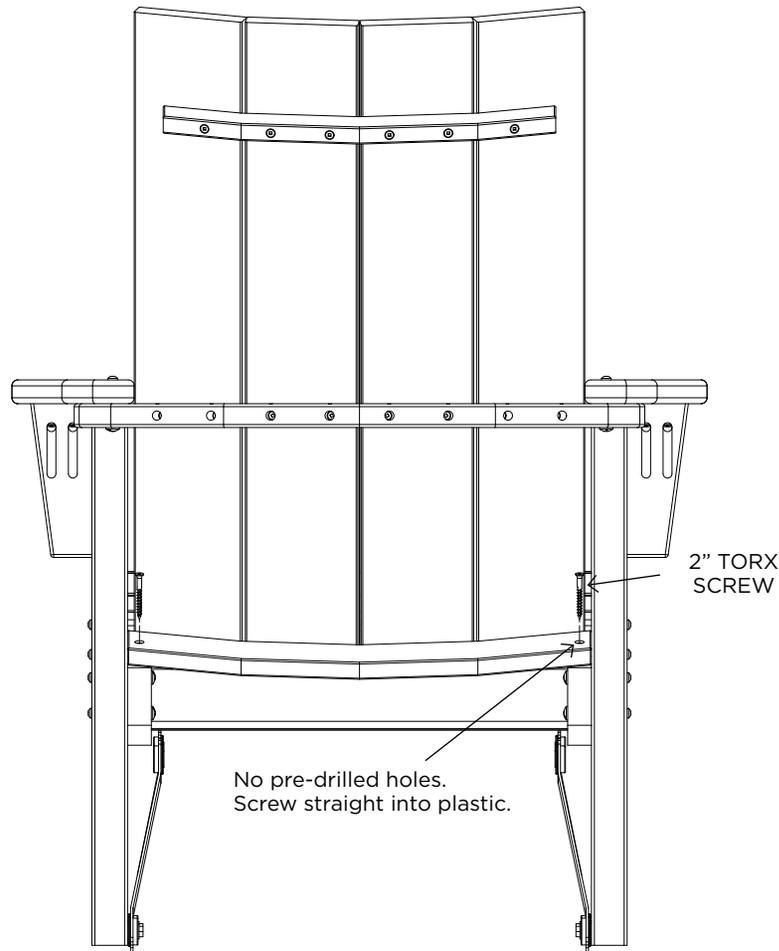

**STEP 5.** Use (4) 2.5" hex bolts, (4) washers, and (4) lock nuts to attach assembled chair to the glider base. Leave bolts loose until all 4 are in then **tighten all bolts.**

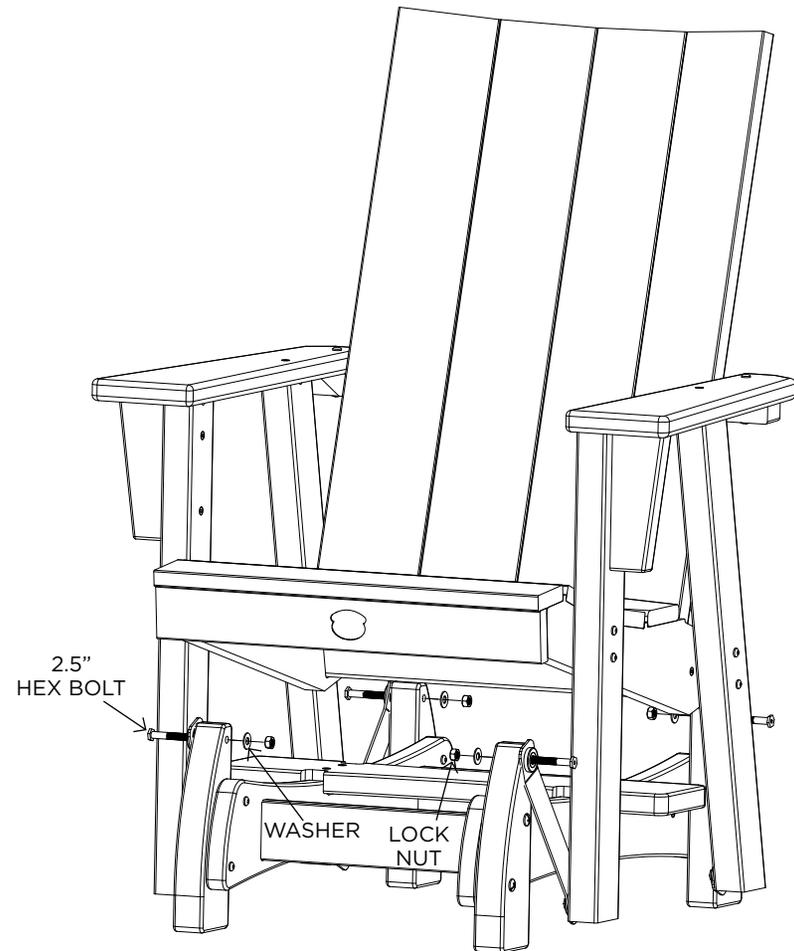

**Congratulations on purchasing this Durawood Fan Back Glider Chair. QUESTIONS REGARDING THIS PRODUCT? Call our customer service team, 252-758-0641.**

**RESIDENTIAL WARRANTY** - This quality product includes a LIMITED LIFETIME WARRANTY for RESIDENTIAL CUSTOMERS. In the unlikely event any splintering, rotting, cracking, peeling, or chipping should ever occur, The Hammock Source will supply replacement parts or replace the furniture, at no charge to you. This does not include negligence, improper use, animal damage or damage caused by natural disasters. When using around fire, keep furniture at a minimum distance of 30 inches from the heat source. Prevent prolonged exposure to chlorinated water. Note that an original sales receipt must accompany any returned product, along with a Return Authorization Number from Hammock Source customer service; call at 252-758-0641.

**CONTRACTOR WARRANTY** - CONTRACTORS receive a LIMITED 7-YEAR WARRANTY. Follow the same steps outlined above.

**MAINTENANCE** - Thoroughly inspect product before each use. Periodically check bolts after assembly and re-tighten when necessary.

