 




DELUXE DOUBLE CHAIR/ ROCKER INSTRUCTIONS

NOTE. Instructions not to scale.

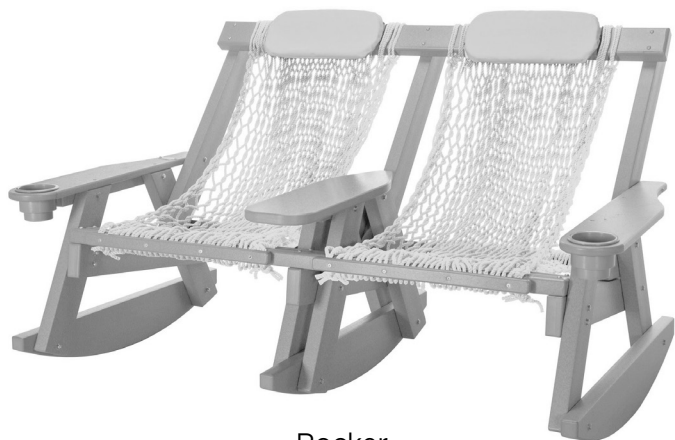

Rocker



Chair

Tip: When using a barrel bolt with a barrel nut, place the bolt into the barrel nut and gently turn it counter clockwise until you feel a slight click. Then proceed to turn the bolt clockwise to tighten the barrel nut onto the barrel bolt.

HARDWARE PACK



(6) 4.5" Barrel Bolts



 
(2) 4" Barrel Bolts




(7) 5" Hex Bolts




(8) 3.5" Hex Bolts

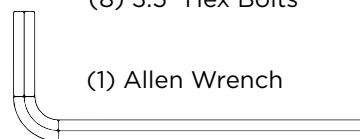

 
(1) Allen Wrench



 (8) 1" Barrel Nuts



 (30) Washers



(15) Lock nuts

 
HARDWARE PACK - Rocker




(2) 5" Hex Bolts



(4) 3.5" Hex Bolts



 (12) Washers



(6) Lock nuts

 
SUGGESTED TOOLS

- RUBBER Mallet
- SOCKET WRENCH
- PHILLIPS HEAD SCREWDRIVER
- 7/16" x 1/4" DEEP SOCKET


ASSEMBLY

STEP 1. Arrange left arm with chair body. Large hole for cupholder should be at front of arm and aligned with holes at front of roll-up. Insert 3.5" Hex Bolt through washer into the hole and secure using a washer and nut. Use this process for the two holes on the front leg and one hole on rear leg, repeat for right side.

NOTE. Do **not** tighten bolts until assembly is complete. (Step 7 for chair, 8 for rocker)

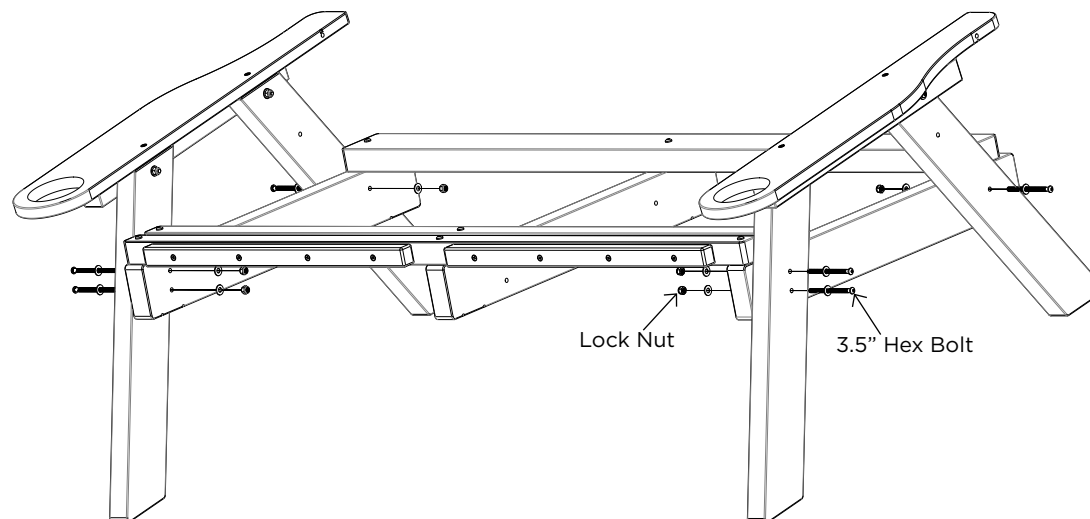


 STEP 2. Position an upright as shown and secure it with (1) 3.5" Hex bolt and a washer on each side of the material. Repeat for the other side.

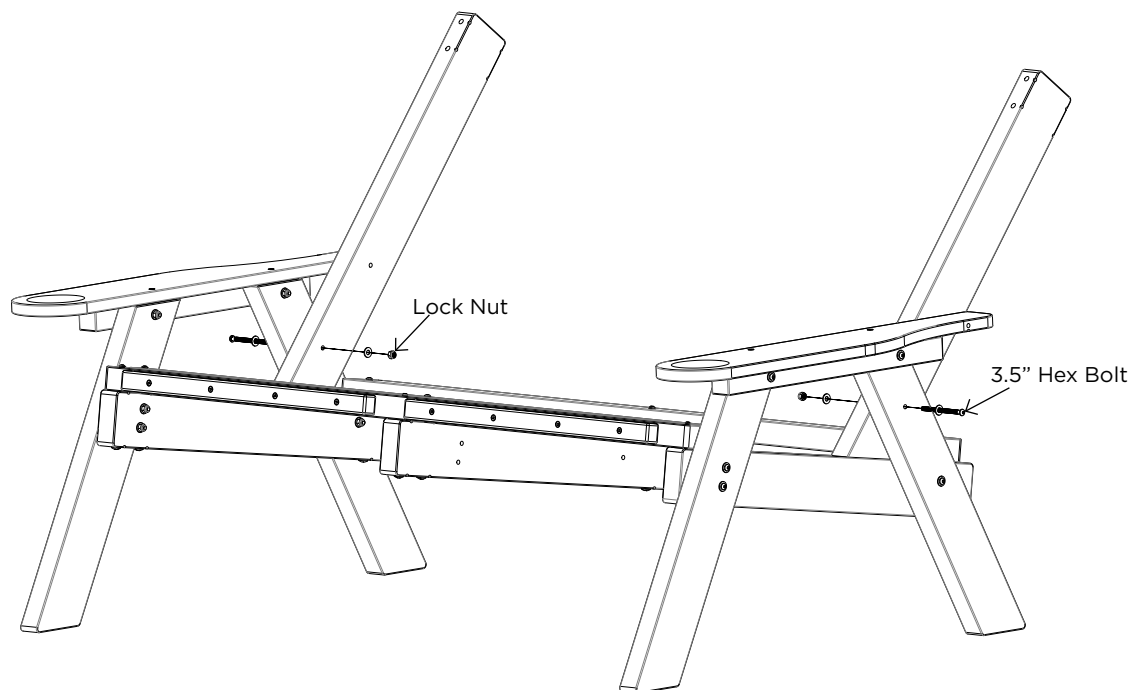


ASSEMBLY


STEP 3. Use (2) 4" Barrel Bolts and (2) Barrel Nuts to attach arms to left and right supports, one side at a time.

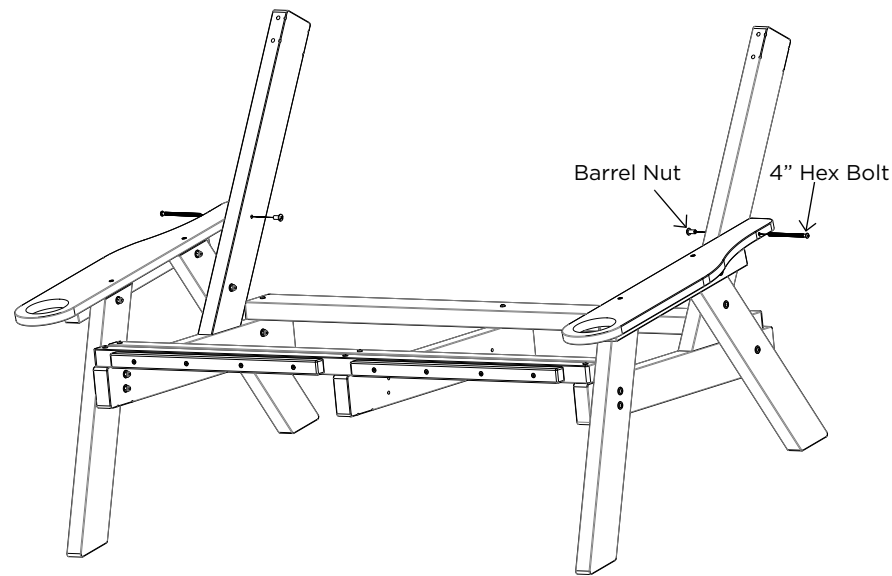


STEP 5. Using (2) 5" Hex Bolts, connect the table top to the front and rear center legs as shown.

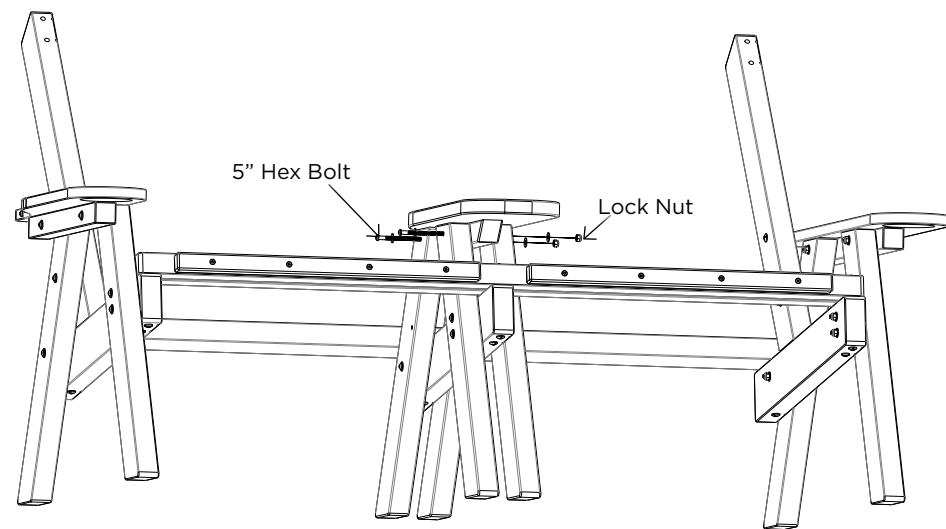

STEP 4. Using (3) 5" Hex Bolts, connect the front and rear center legs to the frame as shown.

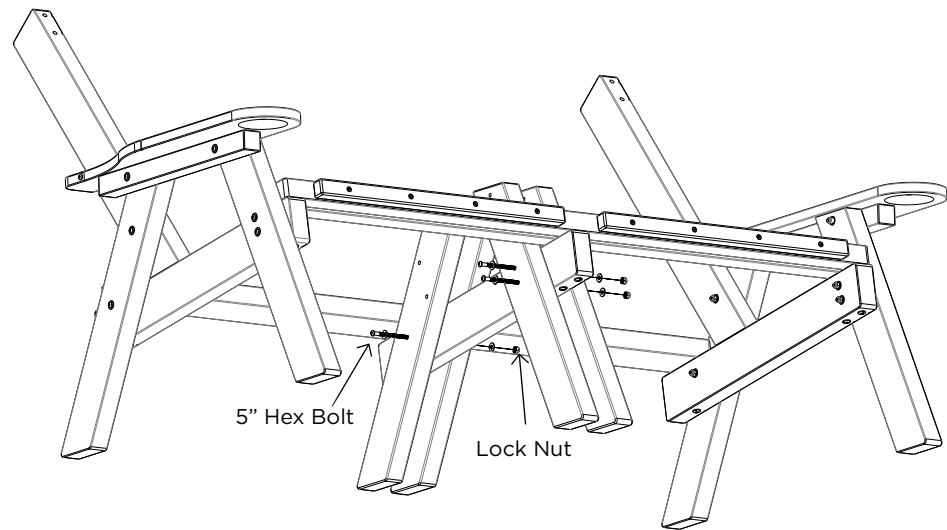


STEP 6. Position center upright as shown and secure it with (2) 5" Hex bolt and a washer on each side of the material.

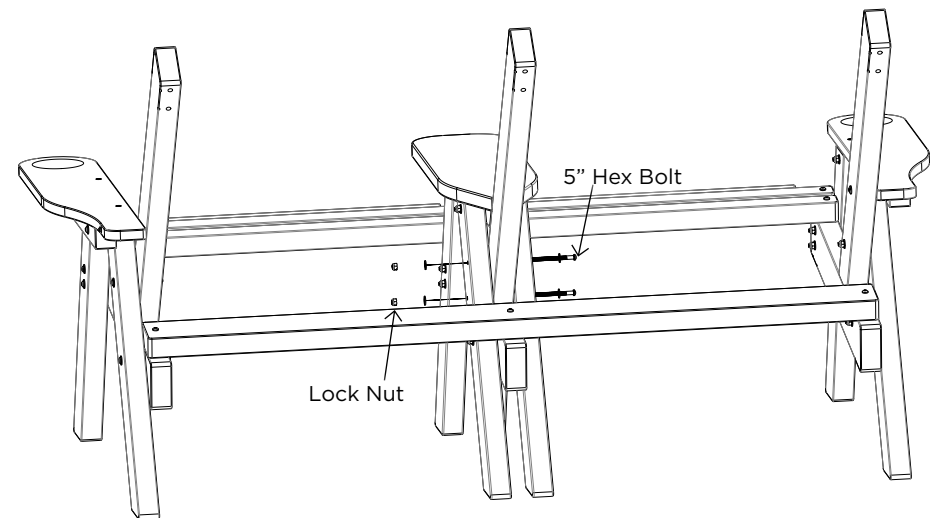

STEP 7. Starting with the center upright attach the roll-up using (2) 4.5" Barrel Bolts and (2) Barrel Nuts, repeat for left and right uprights.

For the chair, insert plastic drink holders, tighten all bolts and enjoy!


For the rocker continue to step 8.

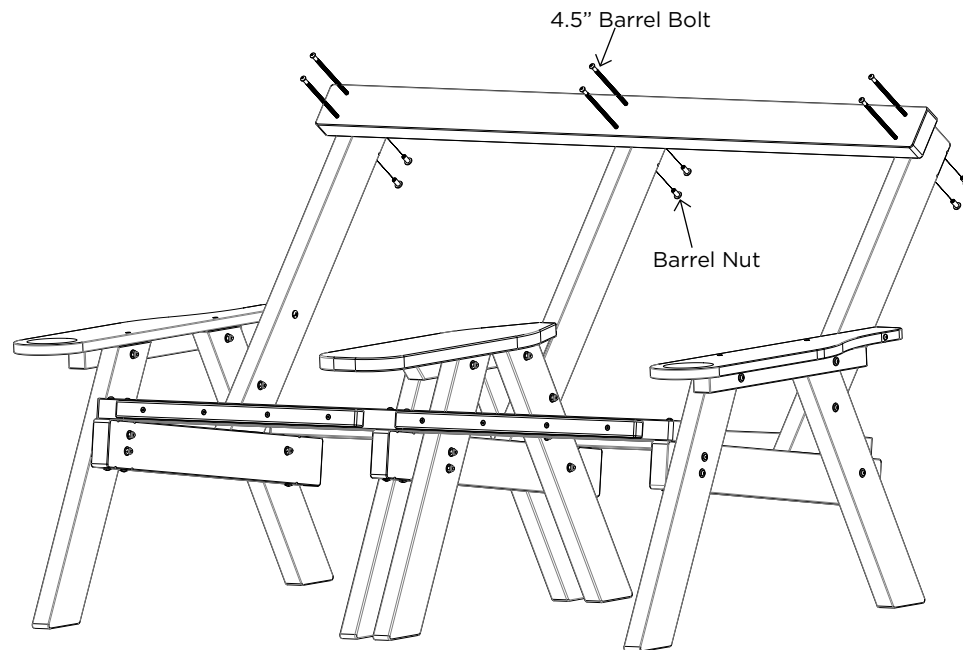

STEP 8. Using (4) 3.5" Hex Bolts, connect left and right runners, then attach the center runner using (2) 5" Hex Bolts with a washer on each side of the material for all runners.

Note: The small ends of runners should face forward.

Tighten all bolts and enjoy!

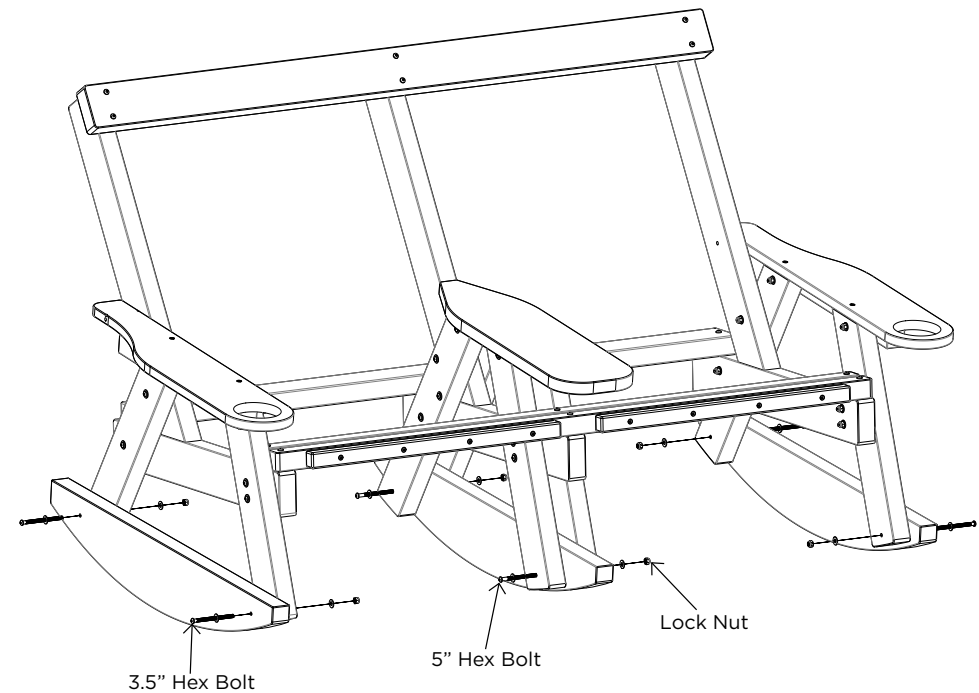

Congratulations on purchasing this Original Nag's Head Deluxe Double Chair/Rocker. QUESTIONS REGARDING THIS PRODUCT? Call our customer service team, 252-295-0405.

INSTALLATION - Get somebody to help you, some pieces are heavy and a second pair of hands is always helpful. Do not tighten bolts until the product is fully assembled. Some pieces are harder to fit in place and this will help. A hammer or rubber mallet is needed during assembly. Do not over-tighten the bolts or screws. Build your item close to where it will be used to eliminate difficulty in moving once completed. For a uniform look, face all nuts in the same direction.

MAINTENANCE - Great care has been put into manufacturing this item. However, it is made of high density resin and some natural aesthetic imperfections and dark spots are normal and should be expected. You can wash the wood and the rope using a hose and some bleach water. You can also brush the wood to help remove dirt.

Thoroughly inspect product before each use. Periodically check bolts after assembly and re-tighten when necessary.


WARRANTY & RETURNS - Our Coastal Collections products are guaranteed to be free of defects in both workmanship and material. The Durawood Frame is backed by a limited lifetime warranty. In the unlikely event that any splintering, rotting, cracking, peeling, or chipping should ever occur on The Hammock Source will supply replacement parts, at no charge to you. This does not include negligence, improper use, animal damage or damage caused by natural disasters. Our Duracord Rope components are guaranteed free of defects in workmanship and materials for up to one year from the date of purchase. Prolonged exposure of the rope components to weather conditions including snow, rain, and humidity are not covered under the warranty, nor is damage caused by normal wear, mildew, or improper care, including storage, maintenance, and assembly. When using around fire, keep furniture at a minimum distance of 30 inches from the heat source. Prevent prolonged exposure to chlorinated water. Note that an original sales receipt must accompany any returned product, along with a Return Authorization Number from Nags Head Hammocks customer service; call (252) 295-0405.

BOX/PARTS BREAKDOWN

Note: Double Chair Legs Shown, Rocker legs are slightly different at the bottom

ARM BOX:

- (1) Left Arm Assembly
- (2) Right Arm Assembly

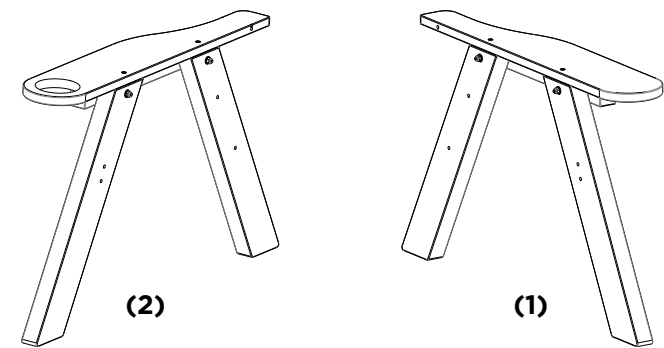


BODY BOX:

- (1) Top Roll-up
- (2) Outer Upright x 2
- (3) Center Upright
- (4) Center Front Leg x 2
- (5) Center Rear Leg x 2
- (6) Table Top
- (7) Body/Frame

ROCKER PARTS:

 - (1R) Center Rocker
- (2R) Outer Rocker x 2

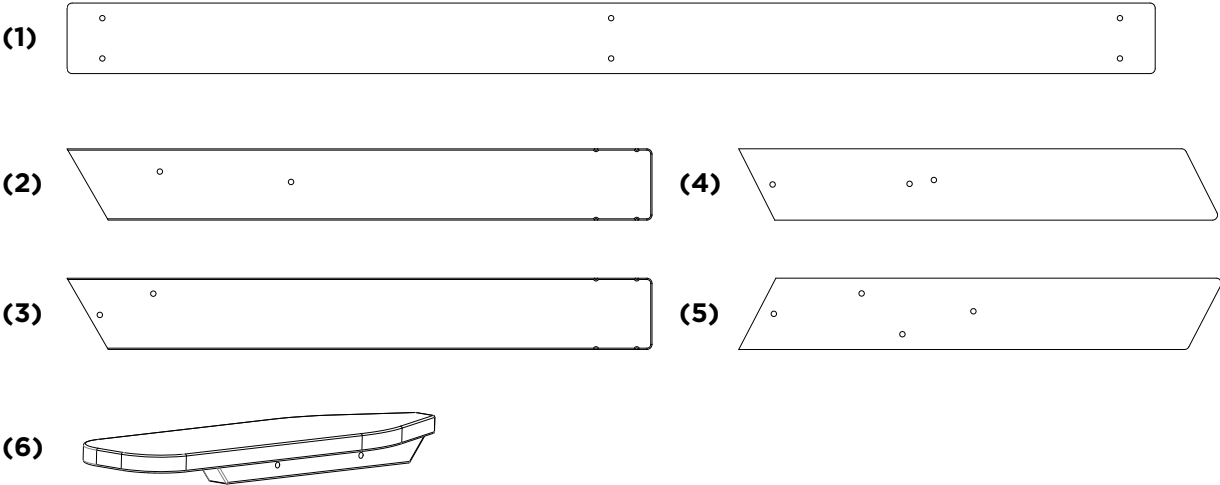

ROCKER ONLY PARTS

Note: Rocker legs have bolt holes at the bottom, not pictured above

